

TM



MODEL: FP9017-A
220 - 240 V



THANK YOU...

On behalf of the entire team at Thane Housewares™, we appreciate your recent purchase of the FlavorQuik™ unit.

We worked long and hard to make this the best small kitchen appliance available and, only after extensive testing, added it to our family of quality products for the home. Please read this book thoroughly and retain for future reference.

Enjoy your FlavorQuik™ unit!

... and, once again, thank you.

"FlavorQuik", "FLAVORQUIK" and associated logos and variations are trademarks of Thane International, Inc. and/or its subsidiaries.

Read this manual thoroughly before using your FlavorQuik™ unit and save it for future reference.



CLEANING AND MAINTENANCE



Always be sure that the motor unit is unplugged and removed from any attachment before cleaning.

1. Motor unit: Wipe the motor unit with a damp cloth and dry thoroughly.



Do not wash the motor unit under running water, or immerse it into any liquid. Fig. 1.

DO NOT PUT IN DISHWASHER.

2. Detachable shaft: Wash the detachable shaft under running water without the use of abrasive cleaners or detergents. Fig. 2.

DO NOT PUT IN DISHWASHER.

NOTE: Do not immerse the detachable stem in water as the lubrication on the bearings may wash away. After cleaning the detachable shaft place it upright so that any remaining water can drain out.

3. Blades and Disc Blade: Wash the blades and Disc Blade in soapy water, rinse and let dry. Fig. 3.

DO NOT PUT IN DISHWASHER.

NOTE: Some food may discolor the Disc Blade. This is normal and will not harm the plastic or affect the flavor of food. Rub with cloth dipped in vegetable oil to remove discoloration.



Blades and discs are very sharp, handle with care.



FIG. 1

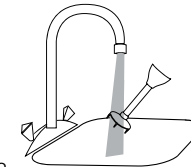


FIG. 2

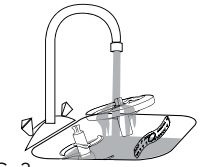


FIG. 3

4. Food processor bowl, small and large food pusher, blender jug and chopper bowl:

Wash these parts in soapy water, rinse and dry thoroughly. Although these parts are dishwasher safe we recommend to clean them manually since the plastic material may deteriorate if frequently machine washed.

5. The non-slip base on the bottom of the bowl and jug can be detached for cleaning. Wash it in soapy water, rinse and dry thoroughly. Make sure it is in place before next use.

DO NOT PUT IN DISHWASHER.

6. Food processor lid, blender jug lid (optional accessory) and chopper bowl lid (optional accessory):

Wipe the lid with a damp cloth or sponge and dry thoroughly.

After cleaning the lid, place it on a flat and dry surface so that any remaining water can drain out.


DO NOT PUT IN DISHWASHER.

NOTE: Do not immerse the lid in water as the lubrication on the bearings may wash away.

7. Storage Lids: (optional accessory)

Wash the storage lids in soapy water, rinse and let it dry.

DO NOT PUT IN DISHWASHER.

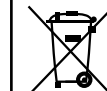


DISPOSAL

Please check the regulations in your area before discarding this appliance. Electrical equipment may be subject to special rules regarding disposal.




OPTIONAL ACCESSORIES

MEASURING CUP

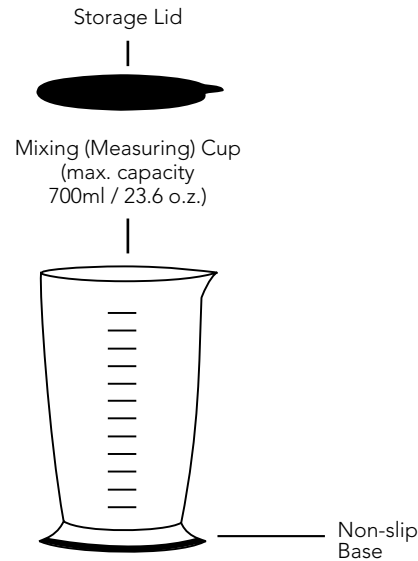

TO-GO CUPS

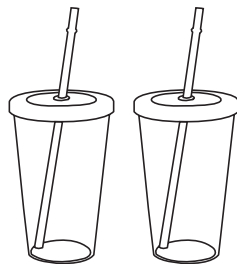

For your convenience, use these to-go cups to take your smoothie with you. Hand-washing will extend the life of your cups; however you can also wash them in the dishwasher on the upper rack and in a gentle cycle.

WARNING These cups are designed for cold drinks and should not be used with hot beverages.



TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	3 - 4
BEFORE THE FIRST USE	5
ATTACHMENTS	5
• BLENDER	5
ASSEMBLY OF THE BLENDER	6
HOW TO OPERATE THE BLENDER	7 - 8
• HAND BLENDER (VORTEX BLENDER)	9
ASSEMBLY OF THE HAND BLENDER	10 - 11
HOW TO OPERATE THE HAND BLENDER	11 - 12
OPTIONAL ATTACHMENTS	13
• FOOD PROCESSOR	13
ASSEMBLY OF OPTION 1 - VORTEX 4 BLADE	14
HOW TO OPERATE THE FOOD PROCESSOR WITH VORTEX 4 BLADE	15 - 16
ASSEMBLY OF OPTION 2 (DISC BLADE)	17 - 18
HOW TO OPERATE THE FOOD PROCESSOR WITH DISC BLADE	18 - 20
• CHOPPER	21
ASSEMBLY OF THE CHOPPER	22
HOW TO OPERATE THE CHOPPER	23 - 24
OPTIONAL ACCESSORIES	25
• MEASURING CUP	25
• TO-GO CUPS	25
CLEANING AND MAINTENANCE	26
DISPOSAL	26



IMPORTANT SAFEGUARDS

Before using this electrical appliance, the following basic precautions should always be followed:

1. Read all instructions.
2. Before using, check that the voltage of the wall outlet corresponds with the voltage shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest qualified service facility for examination, repair or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer or a qualified service agent or technician in order to avoid a hazard.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Do not let the cord hang over the edge of a counter or come into contact with a hot surface.
7. To avoid the risk of electric shock, do not try to disassemble the FlavorQuik™ unit. Take it to a qualified service facility for repair. Incorrect reassembly can cause a risk of electric shock when the FlavorQuik™ unit is used, and will void the warranty.
8. Never disconnect the unit from the electrical outlet by pulling on the cord. Always grasp the plug and pull to disconnect.
9. To avoid the risk of electric shock, do not immerse motor unit of blender in water or other liquids. If the unit falls into liquid, remove immediately, but do not reach into the liquid unless the unit is unplugged.
10. Close supervision is necessary when this appliance is being used near children or infirm persons.
11. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the appliance.
13. Avoid contact with moving parts.
14. Keep hands and utensils out of the container while operating the unit to reduce the risk of severe injury to persons or damage to the blades. A scraper may be used but only when the unit is not running.
15. The appliance cannot be used for processing hard substances, otherwise the blades could be blunted.
16. Be sure the bowl lid is securely locked in place before operating the appliance.
17. The use of an accessory not recommended or sold by the manufacturer may cause electric shock or injuries to persons.
18. Do not operate the appliance for anything other than its intended use.
19. Never insert food by hand. Always use food pusher.
20. Before removing the motor unit from the bowl, switch off the unit, wait until the blades have come to a complete stop and then remove the motor unit.
21. Do not use fingers to scrape food away from the blade while the appliance is operating. This may result in injury.



6. During processing, you can adjust the speed by selecting the LOW (I) or HIGH (II) speed button.

7. To stop the appliance, take your fingers off the switch button (I) or (II). Unplug the unit from the power outlet.

8. Turn the motor unit counter-clockwise until the arrow mark on the motor unit is aligned with the unlocked symbol (🔓) on the chopper lid, as illustrated in Fig. 8a. Detach the motor unit from the lid as illustrated in Fig. 8b. Turn the lid in a counter-clockwise direction as illustrated in Fig. 8c to remove from the chopper bowl as shown in Fig. 8d.

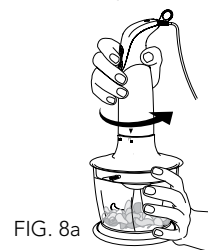


FIG. 8a

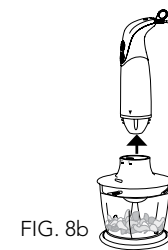


FIG. 8b



FIG. 8c

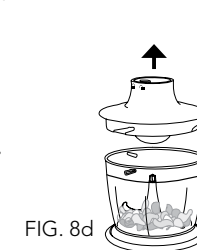


FIG. 8d

CAUTION Do not open the lid until the blades stop rotating.

9. Remove the chopper blade from the chopper bowl as shown in Fig. 9, and pour out the chopped food.

10. If you want to store the chopped food in the chopper bowl, use the storage lid (optional accessory) as illustrated in Fig. 10 and refrigerate. Do not store the chopped food in the bowl for an extended period.

CAUTION Keep the electrical cord away from any hot surface.

CAUTION Always unplug the FlavorQuik™ unit after use.

CAUTION Keep the FlavorQuik™ unit out of reach of children.

CAUTION Blades are very sharp, keep fingers away.



FIG. 9

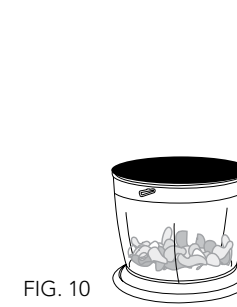


FIG. 10



HOW TO OPERATE THE CHOPPER

Use the chopper to chop small amounts of food such as meat, cheese, onions, herbs, garlic, carrots, nuts, etc.

NOTE: Do not use the blender for processing hard cheese

1. Place the chopper on a flat surface such as the kitchen countertop.
2. Place the food into the chopper bowl.
3. Make sure that the chopper lid is securely locked in place.

NOTE: Before processing fruit, remove any pits. If chopping meat, remove the bone, cut into small pieces, then place the meat into the chopper bowl. The maximum quantity of meat in the chopper bowl cannot exceed 120g (7oz).

4. Plug the FlavorQuik™ appliance into a power outlet.
5. Hold the motor body with one hand and the chopper bowl with the other and then select the required speed and press the (I) switch for LOW speed or (II) switch for HIGH speed, refer to Fig. 5.

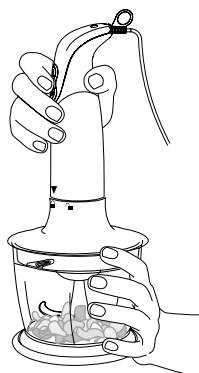


FIG. 5

NOTE: Maximum time of continuous use at high or low speed should not exceed 30 seconds, when processing vegetables or 20 seconds when processing meat.

NOTE: The appliance cannot be used for processing hard food as this will damage the blades.



IMPORTANT SAFEGUARDS - continued

22. Always remove the blade assembly before pouring contents from the bowl.
23. Be sure to switch off the appliance after each use. Make sure the motor stops completely before disassembling.
24. Do not put your fingers or other objects into the unit opening while it is in operation. If food becomes lodged in the opening, use the food pusher or a firm piece of food to push it down. When this method is not possible, turn the motor off and disassemble to remove the remaining food.
25. The metal blades are extremely sharp, handle with care. Always hold the blade assembly by the finger grip or stem, away from the cutting edge, both when handling and cleaning.
26. To reduce the risk of injury, never place cutting blade or discs on base without first putting the bowl properly in place.
27. When mixing liquids, especially hot liquids, use a tall container or process small quantities at a time to reduce spillage.
28. Do not use outdoors.

THE CORD PLUG (for 120V units only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY




BEFORE THE FIRST USE

Check that all accessories are complete and not damaged, and wash all detachable parts thoroughly according to the section CLEANING AND MAINTENANCE.

CAUTION Blades and discs are very sharp, handle with care.

CAUTION Do not rinse the motor unit or submerge it in water.

BLENDER

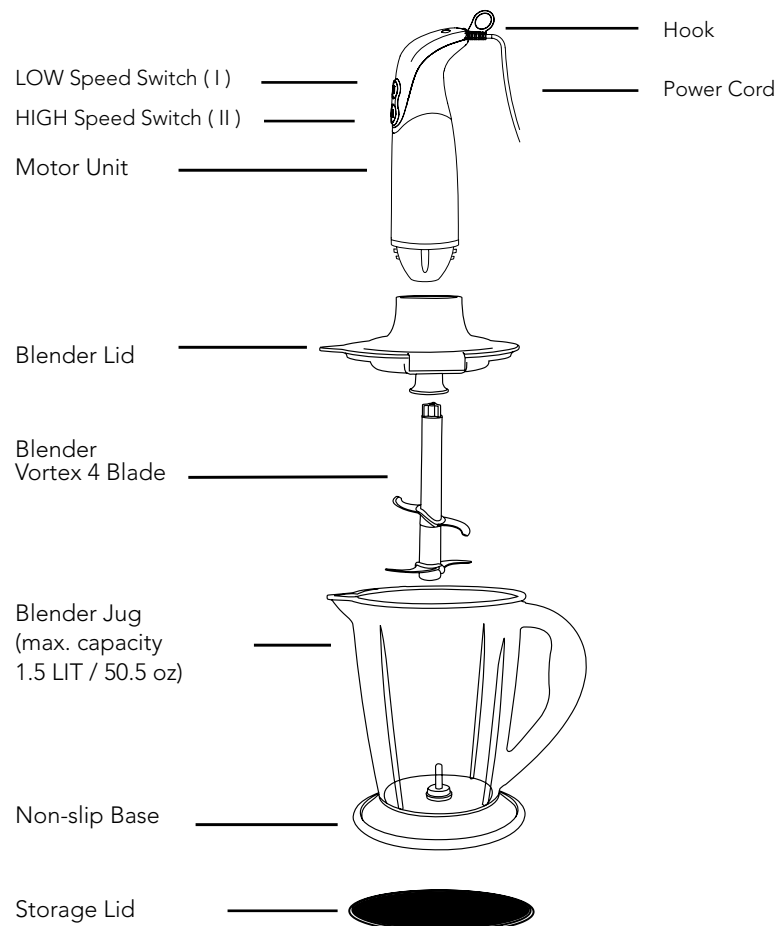

NOTE: The FlavorQuik™ Motor Unit is compatible with all of the Optional Attachments in this User's Guide.



ASSEMBLY OF THE CHOPPER


CAUTION Always be sure that the appliance is unplugged before attaching or removing any attachments.

CAUTION The blades are very sharp. Handle with care.


CAUTION Always place the chopper bowl on a clean level surface and check if the non-slip base on the bottom of the chopper bowl is in place before assembly.

1. Assemble the chopper blade by placing the blade over the pin in the chopper bowl as shown in Fig. 1.

2. Attach the chopper lid onto the bowl, refer to Fig. 2a., and turn it in a clockwise direction until the tongs on the chopper bowl are aligned and locked with the grooves on the chopper lid, as illustrated in Fig 2b. To detach the lid, turn it in the opposite direction.

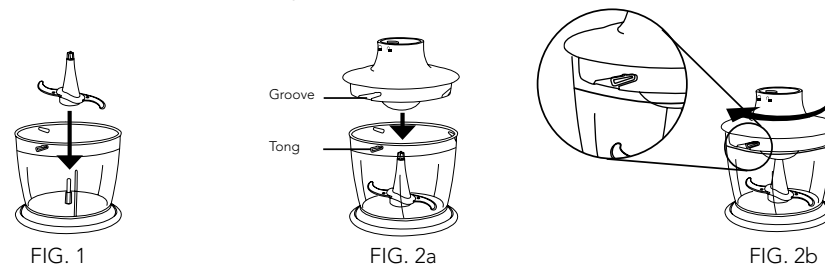


3. To assemble the motor unit, align the arrow mark on the motor unit with the unlocked symbol (🔓) on the chopper lid and attach the motor body to the chopper lid, as shown in Fig. 3a. Turn the motor body in a clockwise direction until the arrow mark on the motor unit is aligned with the locked symbol (🔒) on the lid and the motor unit is securely locked in place, as shown in Fig. 3b.

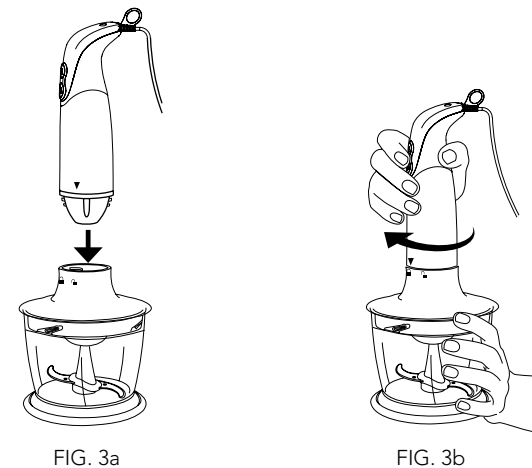



OPTIONAL ATTACHMENTS

CHOPPER

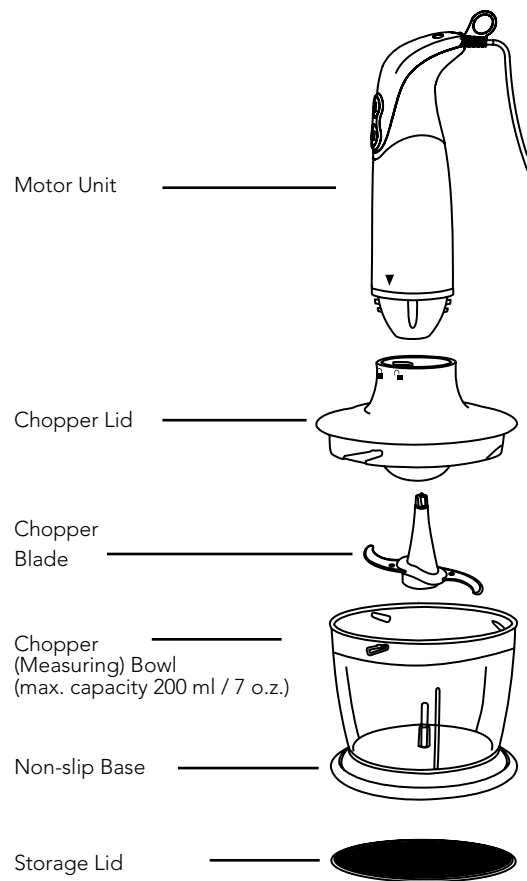

ASSEMBLY OF THE BLENDER


- CAUTION** Always be sure that the appliance is unplugged before attaching or removing any attachments.
- CAUTION** The blades are very sharp. Handle with care.
- CAUTION** Always place the blender jug on a clean level surface and check if the non-slip base on the bottom of the blender jug is in place before assembly.

1. Assemble the vortex 4 blade for blender over the pin in the blender jug as shown in Fig.1.


NOTE: Never add food before installing the vortex 4 blade for blender.

2. Attach the blender lid onto the blender jug, make sure that the spout cover on the lid is aligned with the spout on the blender jug. Push down the lid until it is securely locked in place as illustrated in Fig. 2a and 2b.

NOTE: Make sure that the blender lid is securely locked in place before operating the appliance.

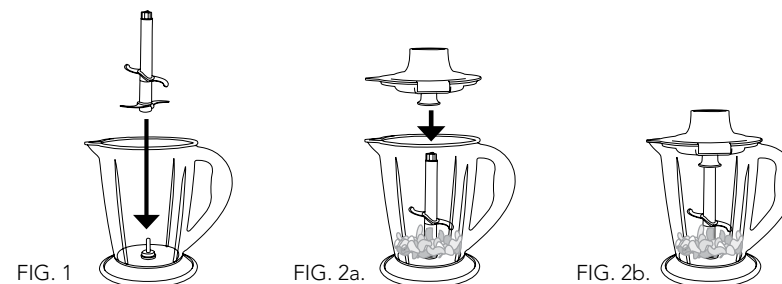

3. To assemble the motor unit, align the arrow mark on the motor unit with the unlocked symbol (🔓) on the blender lid and attach the motor body to the blender lid. Turn the motor body in the clockwise direction until the arrow mark on the motor unit is aligned with the locked symbol (🔒) on the lid and the motor unit is securely locked in place as shown in Fig. 3.

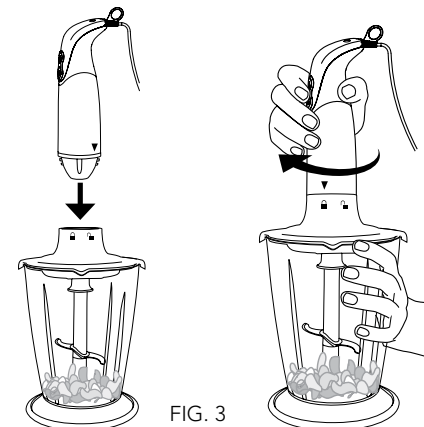



HOW TO OPERATE THE BLENDER

Use the blender for blending juices, smoothies, and vegetables. The blender can also be used for processing meat.


NOTE: Do not use the blender for processing hard cheese.

1. Make sure that the non-slip base is correctly attached to the bottom of the blender jug.
2. Place the blender on a flat surface such as a kitchen countertop.
3. Place the ingredients inside the blender jug.

NOTE: Before blending fruit remove any pits, and if processing meat remove any bones and cut into small pieces.

For the most consistent results do not overfill the jug, and blend the food in smaller quantities.

4. Make sure that the blender lid is securely locked in place.
5. Plug the FlavorQuik™ appliance into a power outlet.
6. Hold the motor body with one hand and the blender jug with the other and then select the required speed and press the (I) switch for LOW or (II) switch for HIGH speed.

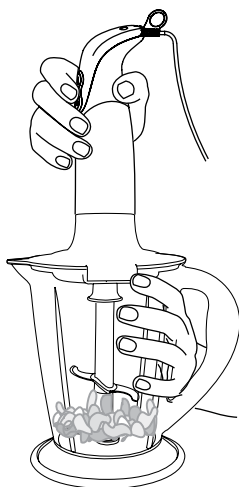

NOTE: Maximum time of continuous use at high or low speed should not exceed 30 seconds when processing vegetables or 20 seconds when processing meat.

NOTE: The appliance cannot be used for processing hard food as it will damage the blades.




10. Remove the lid by pulling out the locking clips on either side of the lid as illustrated in Fig. 10a. and 10b.

11. Remove the Disc Blade from the food processor bowl as illustrated in Fig. 11 and pour out the processed food.

12. If you want to store the processed food in the food processor bowl use the storage lid (optional accessory) as illustrated in Fig. 12 and refrigerate. Do not store the processed food in the bowl for an extended period.

- CAUTION** Keep the electrical cord away from any hot surface.
- CAUTION** Always unplug the FlavorQuik™ unit after use.
- CAUTION** Keep the FlavorQuik™ unit out of reach of children.
- CAUTION** Blades are very sharp; keep fingers away.

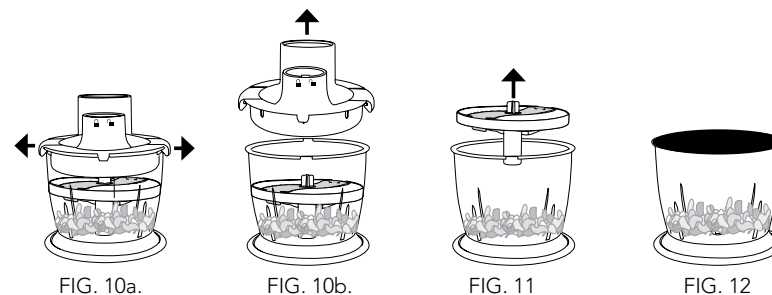


TIPS:

- Use fresh ingredients.
- Do not cut small pieces of food. Cut food to fit feed tube and insert food into tube securely to keep food from slipping sideways during processing.
- Food placed upright comes out shorter than food placed horizontally.
- There will always be a small amount of waste left on the disc or in the bowl after processing.

HOW TO CHANGE / REMOVE THE BLADE FROM THE DISC

1. Hold the disc with one hand and with the other hand push the long locking clip inwards until the blade pops up as illustrated in Fig. 1a and 1b.
2. Remove the blade from the disc as illustrated in Fig. 2.

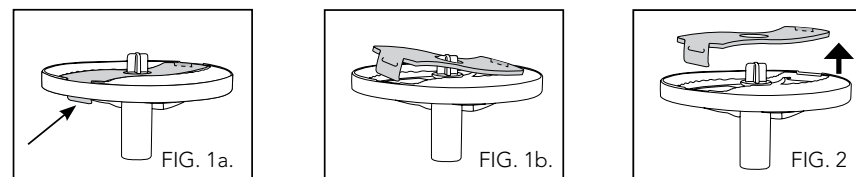



6. Hold the motor body with one hand, select the required speed and press the (I) switch for LOW or (II) switch for HIGH speed. Using the other hand insert the food through the feed tube and use the food pusher to push the food through if necessary.

CAUTION Never use your fingers to push the food through the feed tube.

7. During processing you can adjust the speed by selecting the LOW (I) or HIGH(II) speed button.


NOTE: The maximum quantity of food can't exceed the maximum capacity of the bowl for each operation.

For the most consistent results do not overfill the bowl and process the food in smaller quantities.

NOTE: The appliance cannot be used for processing hard food as this will damage the blades.

8. To stop the appliance, take your fingers off the switch button (I) or (II) and unplug the unit from the power outlet.

9. Turn the motor unit counter-clockwise until the arrow mark on the motor unit is aligned with the unlocked symbol () on the food processor lid as illustrated in Fig. 9a. Detach the motor unit from the lid as illustrated in Fig. 9b.

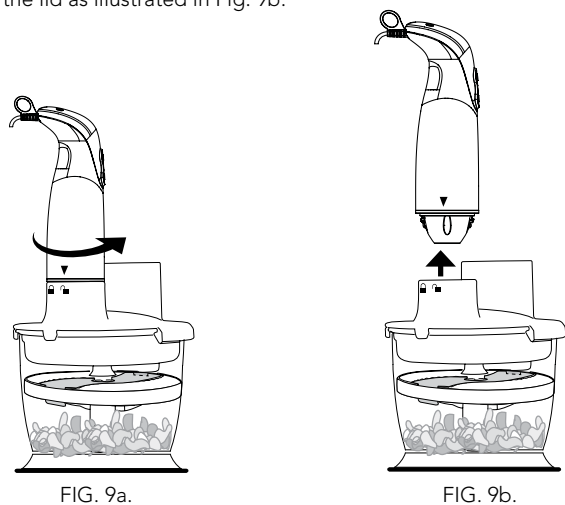

CAUTION Do not open the lid until the blades stop rotating.




7. To stop the appliance, take your fingers off the switch button (I) or (II). Unplug the unit from the power outlet.

8. Turn the motor unit counter-clockwise until the arrow mark on the motor unit is aligned with the unlocked symbol () on the blender lid. Detach the motor unit from the lid as illustrated in Fig. 8a and 8b.

CAUTION Do not open the lid until the blades stop rotating.


9. Remove the lid by pulling out the locking clips on either side of the lid as illustrated in Fig. 9a and 9b.

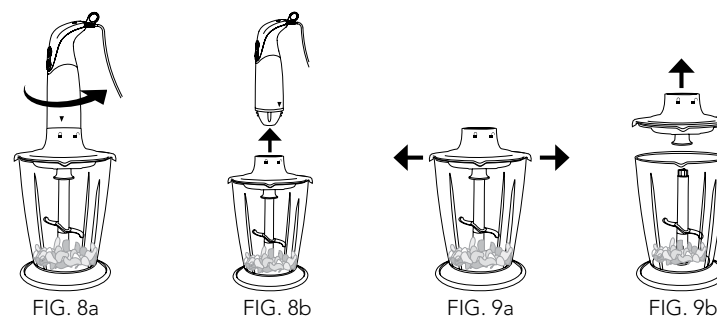

10. Remove the vortex 4 blade for blender from the blender jug as illustrated in Fig. 10a, and pour out the blended food.


11. If you want to store the blended food in the blender jug, use the storage lid and refrigerate as illustrated in Fig. 10b. Do not store the blended food in the jug for an extended period.

- CAUTION** Keep the electrical cord away from any hot surface.
- CAUTION** Always unplug the FlavorQuik™ unit after use.
- CAUTION** Keep the FlavorQuik™ unit out of reach of children.
- CAUTION** Blades are very sharp; keep fingers away.

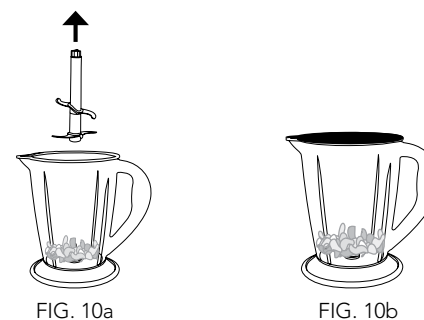

OPTIONAL ATTACHMENTS

HAND BLENDER (VORTEX BLENDER)

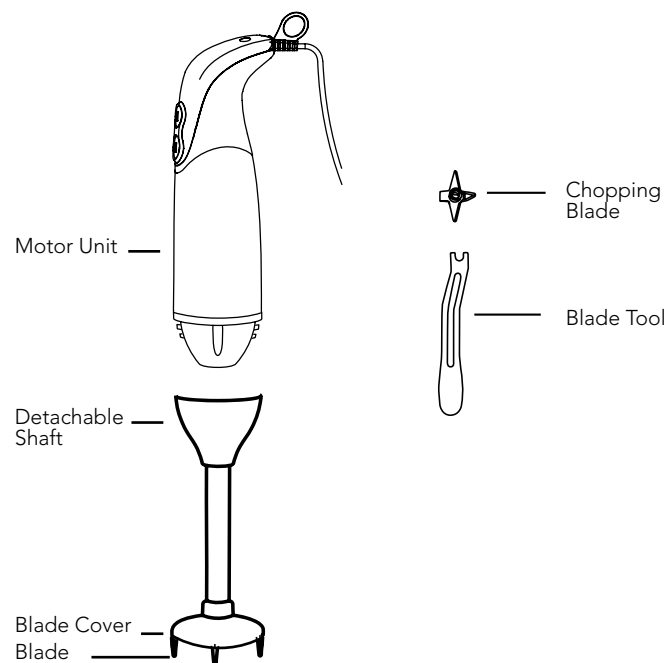

5. To assemble the motor unit, align the arrow mark on the motor unit with the unlocked symbol (U) on the food processor lid and attach the motor body to the food processor lid. Turn the motor body in the clockwise direction until the arrow mark on the motor unit is aligned with the locked symbol (L) on the lid and the motor unit is securely locked in place as shown in Fig. 5.

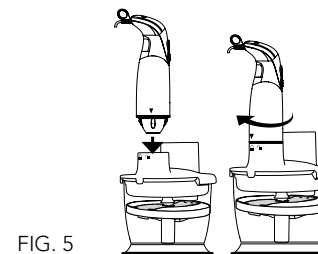


FIG. 5

HOW TO OPERATE THE FOOD PROCESSOR WITH DISC BLADE

1. Make sure that the non-slip base is correctly attached to the bottom of the food processor bowl.
2. Place the food processor on a flat surface such as a kitchen countertop.
3. Make sure that the lid is securely locked and the large food pusher and the small food pusher are in place, refer to Fig. 3.
4. Plug the FlavorQuik™ appliance into a power outlet.
5. Select which size feed tube/food pusher you want to use.

When processing small pieces of food insert the large food pusher (with built in small feed tube) into the feed tube on the food bowl lid and then use the small food pusher for pushing the food as illustrated in Fig. 5a.

When processing large pieces of food use the large food pusher as illustrated in Fig. 5b.

Make sure that the small food pusher is inserted into the small feed tube in the large food pusher.

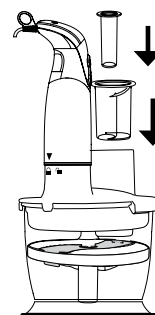


FIG. 3

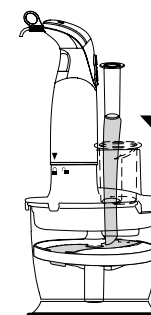


FIG. 5a.

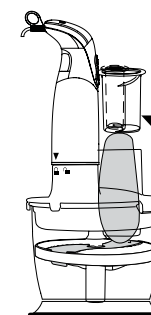


FIG. 5b.



ASSEMBLY OF OPTION 2 - DISC BLADE

CAUTION Always be sure that the appliance is unplugged before attaching or removing any attachments.

CAUTION The blades are very sharp. Handle with care.

CAUTION Always place the food processor bowl on a clean level surface and check if the non-slip base on the bottom of the food processor bowl is in place before assembly.

1. Select the Blade

SLICING BLADE

The Slicing Blade is best suited for slicing carrots, potatoes, cucumbers, cabbage, and foods of similar texture. This blade is great for making baked potato chips and sliced vegetables.

SMALL SHREDDING BLADE

The Small Shredding Blade is best suited for shredding food items such as cheese, apples, cabbage, carrots, and cucumbers into small pieces for salads and toppings.

LARGE SHREDDING BLADE

The Large Shredding Blade is best suited for shredding food items into larger pieces.

2. Locate the short and long locking clip on the blade as illustrated in Fig. 2a. First insert the short locking clip into the designated slot on the disc and then push the other side of the disc with the long locking clip until it is firmly locked in place as illustrated in Fig. 2b.

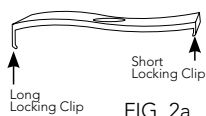


FIG. 2a.

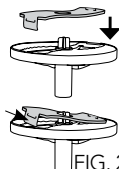


FIG. 2b.

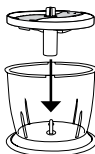


FIG. 3

3. Assemble the Disc Blade (with desired blade) over the pin in the food processor bowl as illustrated in Fig. 3.

NOTE: Never add food before installing the Disc Blade.

4. Attach the food processor lid onto the bowl, refer to Fig. 4a. Make sure that the two tongs (extensions) on the lid are aligned with the two grooves on the food processor bowl as illustrated in Fig. 4b.

Once the two tongs on the lid are slotted in the two grooves, push down the lid until it is securely locked in place as illustrated in Fig. 4c.

NOTE: Make sure that the food processor lid is securely locked in place before operating the appliance.

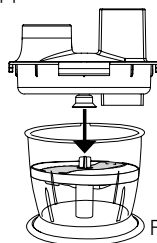


FIG. 4a.

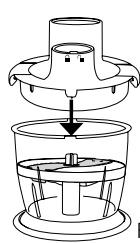


FIG. 4b.

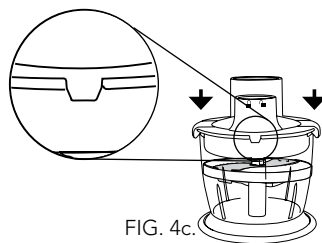


FIG. 4c.



ASSEMBLY OF THE HAND BLENDER

CAUTION Always be sure that the appliance is unplugged before attaching or removing any attachments.

CAUTION The blades are very sharp. Handle with care.

CAUTION Always place the mixing cup on a clean level surface and check if the non-slip base on the bottom of the mixing cup is in place before use.

The blade is used for chopping, pureeing, blending and mixing. Move in a circular motion to evenly chop or combine the ingredients, move in an up and down and circular motion for pureeing and blending ingredients. Chops vegetables, fruit and berries; minces cooked meat; purees potatoes and other vegetables; blends liquids; mixes omelets and cake mixtures; chops and blends smoothies.

HOW TO INSTALL THE BLADE

Align the indentation on the blade with the stop pin on the spindle rod and carefully attach the blade onto the spindle rod as illustrated in Fig. 2a. Push the blade all the way down until it is locked with the stop pin as illustrated in Fig. 2b.

HOW TO REMOVE THE BLADE

Insert the blade tool under the blade as illustrated in Fig. 3a.

Remove the blade by pushing it out with the blade tool Fig. 3b. When removing the blade always point the bottom part of the detachable shaft against the countertop surface in such a way that when the blade is pushed out it safely lands on the countertop Fig. 3c.

CAUTION Exercise caution when removing the blade.

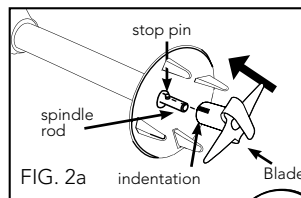


FIG. 2a

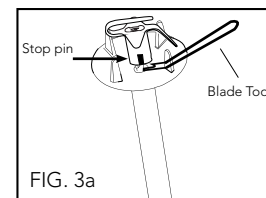


FIG. 3a

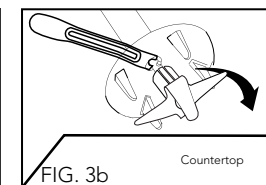


FIG. 3b

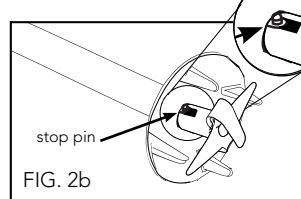


FIG. 2b

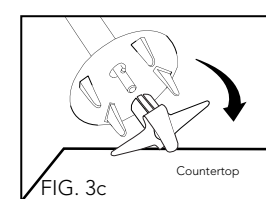


FIG. 3c



4. SHAFT ASSEMBLY

To assemble the detachable shaft with the motor unit, align the arrow mark on the motor unit with the unlocked symbol (🔓) on the detachable shaft and attach the shaft to the motor body. Turn the motor body in the clockwise direction until the arrow mark on the motor unit is aligned with the locked symbol (🔒) on the detachable shaft and the motor unit is locked in place as shown in Fig. 4.

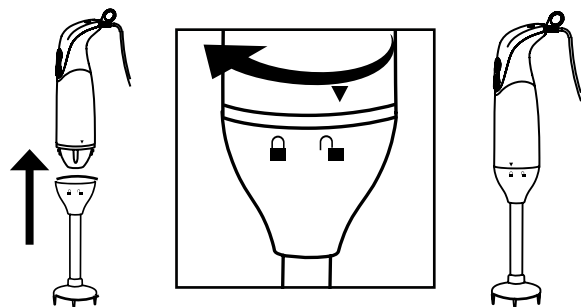


FIG. 4

HOW TO OPERATE THE HAND BLENDER

1. Place food in your mixing cup. For the most consistent results, do not overfill the mixing container, and process the food in smaller quantities.


NOTE: Before processing fruit remove any pits.

NOTE: The maximum quantity of food can't exceed the maximum capacity of the mixing cup for each operation.

2. Plug the appliance into a power outlet.

3. Hold the motor body with one hand and the mixing bowl with the other, and then lower the blade into the food. Select the required speed and press the (I) switch for LOW or (II) switch for HIGH speed. Guide the blender through the food, slowly moving up and down and from side to side. Fig. 3.

FIG. 3

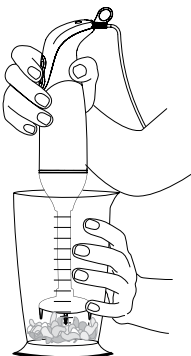

NOTE: Mixing bowl is an optional accessory.

NOTE: Maximum time of continuous use at high or low speed should not exceed 30 seconds when processing vegetables or 20 seconds when processing meat.

CAUTION Exercise caution when blending hot liquids/food - Danger of scalding by splashing hot liquids/food. To avoid splashing: place the blade in the food before switching on; wait for blade to stop rotating before taking the blade out of the food; do not overfill the mixing container.



CAUTION Never use your fingers to push the food through the feed tube.

NOTICE The appliance cannot be used for processing hard food as it will damage the blades.

8. To stop the appliance, take your fingers off the switch button (I) or (II). Unplug the unit from the power outlet.

9. Turn the motor unit counter-clockwise until the arrow mark on the motor unit is aligned with the unlocked symbol (🔓) on the food processor lid as illustrated in Fig. 9a. Detach the motor unit from the lid as illustrated in Fig. 9b.

10. Remove the lid by pulling out the locking clips on either side of the lid as illustrated in Fig. 10a and 10b.

CAUTION Do not open the lid until the blades stop rotating.

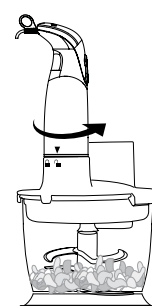


FIG. 9a.

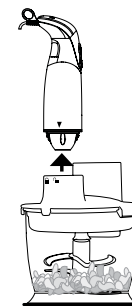


FIG. 9b.

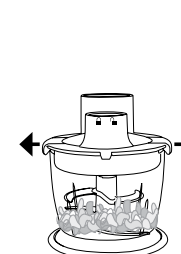


FIG. 10a.

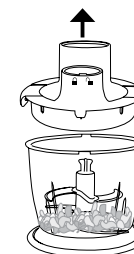


FIG. 10b.

11. Remove the vortex 4 blade from the food processor bowl as illustrated in Fig. 11 and pour out the processed food.

12. If you want to store the processed food in the food processor bowl use the storage lid as illustrated in Fig. 12 and refrigerate. Do not store the processed food in the bowl for an extended period.

CAUTION Keep the electrical cord away from any hot surface.

CAUTION Always unplug the FlavorQuik™ unit after use.

CAUTION Keep the FlavorQuik™ unit out of reach of children.

CAUTION Blades are very sharp; keep fingers away.



FIG. 11



FIG. 12



HOW TO OPERATE THE FOOD PROCESSOR WITH VORTEX 4 BLADE

Use the chopper to chop small amounts of food such as meat, cheese, onions, herbs, garlic, carrots, nuts, etc.

1. Make sure that the non-slip base is correctly attached to the bottom of the food processor bowl.
2. Place the food processor on a flat surface such as a kitchen countertop.
3. Place the food inside the food processor bowl or insert the food through the feed tube on the lid once the lid is installed.

NOTE: Before processing fruit remove any pits, and if processing meat remove any bones and cut into small pieces.

NOTE: Do not use for processing hard cheese.

For the most consistent results do not overfill the bowl, and process the food in smaller quantities.


4. Make sure that the lid is securely locked and the large food pusher and the small food pusher are in place.
5. Plug the appliance into a power outlet.

6. Hold the motor body with one hand and the food processor bowl with the other and then select the required speed and press the (I) switch for LOW or (II) switch for HIGH speed.

NOTE: Maximum time of continuous use at high or low speed should not exceed 30 seconds when processing vegetables or 20 seconds when processing meat.


7. During processing you can adjust the speed by selecting the LOW (I) or HIGH (II) speed button.

NOTE: During operation, you can insert the food through the feed tube and use the food pusher to push the food through if necessary.

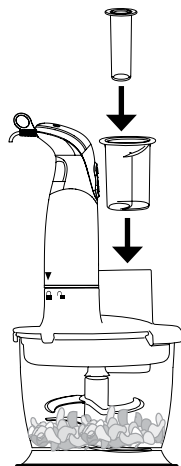

CAUTION

Do not immerse the hand blender into any liquid or food mixture above the seam where the shaft attaches to the motor unit.

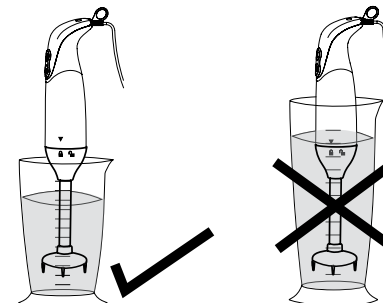

4. During processing you can adjust the speed by selecting the LOW (I) or HIGH (II) speed button.

NOTE:

The hand blender (A,B,C blades) cannot be used for blending hard food and ice as this will damage the blades.

NOTE:

When blending vegetables or fruit, usually a certain amount of water has to be added to facilitate the smooth running of the appliance.

NOTE:

When pureeing food, it is important to use enough liquid (juice, milk or cream, broth, etc.) to have a smooth mixture. Adjust the consistency of the mixture by adding more liquids or soft solids.

5. To stop the appliance, take your fingers off the switch button (I) or (II). Wait for the blade to stop rotating and lift the Hand Blender from the mixture. Unplug the unit.

CAUTION

Keep electrical cord away from any hot surface.

CAUTION

Always unplug the FlavorQuik™ unit after use.

CAUTION


Keep the FlavorQuik™ unit out of reach of children.

CAUTION

Blades are very sharp; keep fingers away.

OPTIONAL ATTACHMENTS

FOOD PROCESSOR

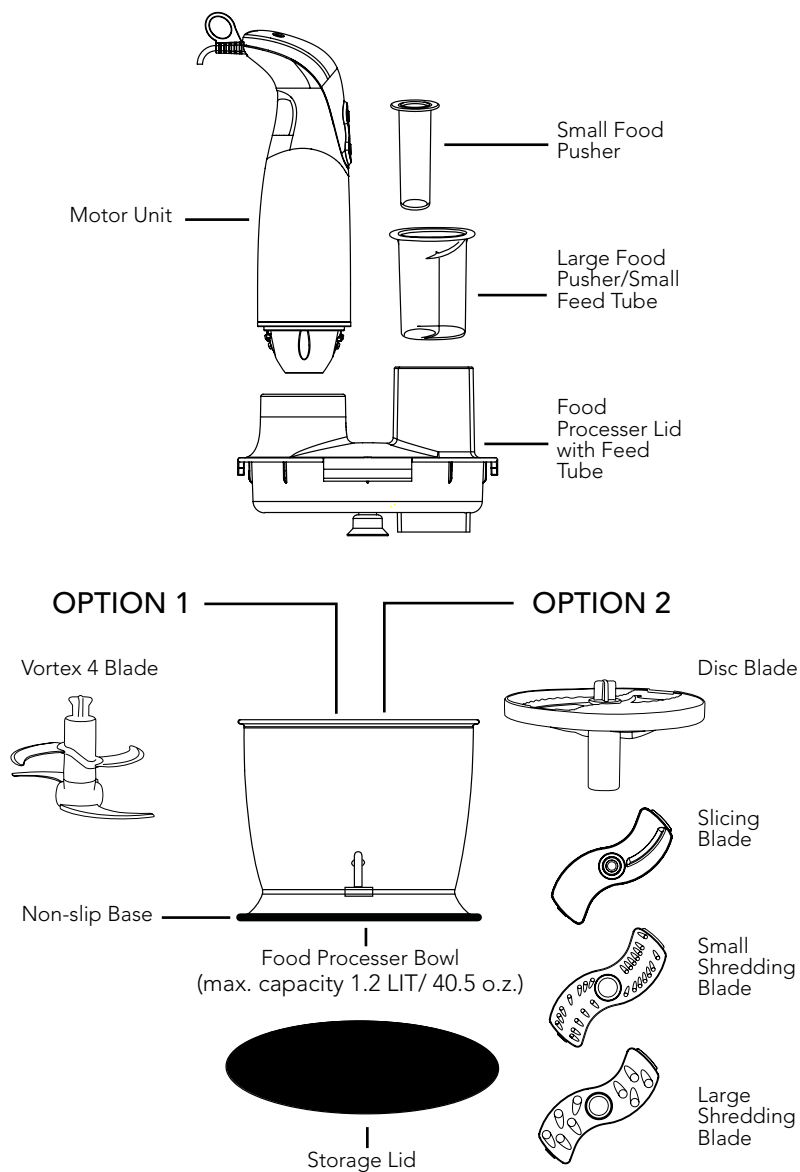

ASSEMBLY OF OPTION 1 - VORTEX 4 BLADE


- CAUTION** Always be sure that the appliance is unplugged before attaching or removing any attachments.
- CAUTION** The blades are very sharp. Handle with care.
- CAUTION** Always place the food processor bowl on a clean level surface and check if the non-slip base on the bottom of the food processor bowl is in place before assembly.

1. Assemble the vortex 4 blade over the pin in the food processor bowl as shown in Fig.1.

NOTE: Never add food before installing the vortex 4 blade.

2. Attach the food processor lid onto the bowl, refer to Fig. 2a. Make sure that the two tongs (extensions) on the lid are aligned with the two grooves on the food processor bowl as illustrated in Fig. 2b. Once the two tongs on the lid are slotted in the two grooves, push down the lid until it is securely locked in place as illustrated in Fig. 2c.

NOTE: Make sure that the food processor lid is securely locked in place before operating the appliance.

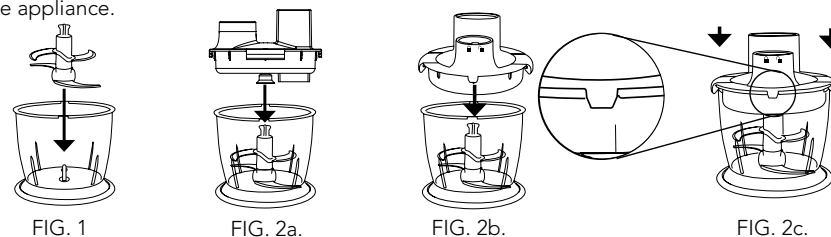

3. To assemble the motor unit, align the arrow mark on the motor unit with the unlocked symbol (■) on the food processor lid and attach the motor body to the food processor lid. Turn the motor body in the clockwise direction until the arrow mark on the motor unit is aligned with the locked symbol (■) on the lid and the motor unit is securely locked in place as shown in Fig. 3.

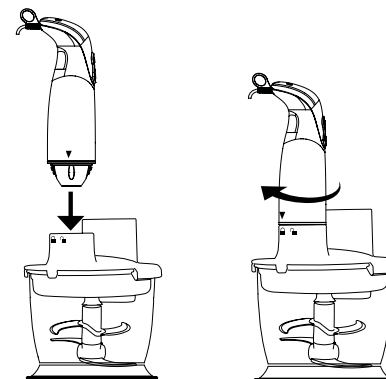


FIG. 3



THANE HOUSEWARES™

Thane International, Inc.
La Quinta, CA 92253,
U.S.A.
www.thane.com

Thane Direct Canada Inc.
Mississauga, ON L4W 5M6,
Canada
www.thane.ca

Thane Direct UK Ltd.
WC2A 3LH
www.thanedirect.co.uk

Danoz Direct Pty Ltd
Alexandria, Sydney
NSW 2015, Australia
www.danozdirect.com.au

MADE IN CHINA

"THANE HOUSEWARES" and associated logos and variations are trademarks of Thane International, Inc. and/or its subsidiaries.

© 2013 THANE INTERNATIONAL, INC.

FlavorQuik-220V MNL ENG R0 130603